

# FIRE FIGHTER'S GUIDE

## 1. VIEW NEXT ALARM



- Press "NEXT" key once -
- The LCD will display the next alarm.

## 2. ACKNOWLEDGE DISPLAYED ALARM



- Press "ACK" key once.
- LCD will display "ACKD" for the displayed alarm.
  - If all alarms are acknowledged, the ALARM LED will go steady.

## 3. RESET ALL ACKNOWLEDGED ALARMS



- Press "RESET" key once.
- LCD will display "Resetting all acknowledged alarms".
  - If there are no acknowledged alarms the LCD will display "No acknowledged zones to reset".
  - If all alarms are reset, the LCD will exit FFCIF mode.

## 4. ISOLATE ALL ACKNOWLEDGED ALARMS



- Press "ISOLATE" key once.
- LCD will display "Isolating all acknowledged alarms".
  - If there are no acknowledged alarms the LCD will display "No acknowledged zones to isolate".
  - Isolated LED will turn on if any zones are isolated.
  - If all alarms are isolated, the LCD will exit FFCIF mode.

## 5. ISOLATE/DE-ISOLATE BELLS



- Press "BELLS ISO" key once.
- If the "Bells Isolated" LED is off  
The "Bells Isolated" LED will turn on steady.  
The bells will turn OFF if they are on.
  - If the "Bells Isolated" LED is on.  
The "Bells Isolated" LED will turn off.  
If any un-isolated alarms exist, the bells will ring.

## 6. BRIGADE TEST



- Press and hold the "BRIG TEST" key for at least 2 seconds.
- The Alarm LED will turn on.
  - The FIP will signal Alarm to the brigade, if programmed to.